


CONTINGENCY CONSIDERATIONS

GUIDANCE FOR PILOTS IN THE IMMEDIATE AFTERMATH OF A SUDDEN WITHDRAWAL OF ATC SERVICES IN OCEANIC AIRSPACE

ATC will notify all affected agencies and operators appropriately by **broadcasting on appropriate frequencies & issue NOTAMS**

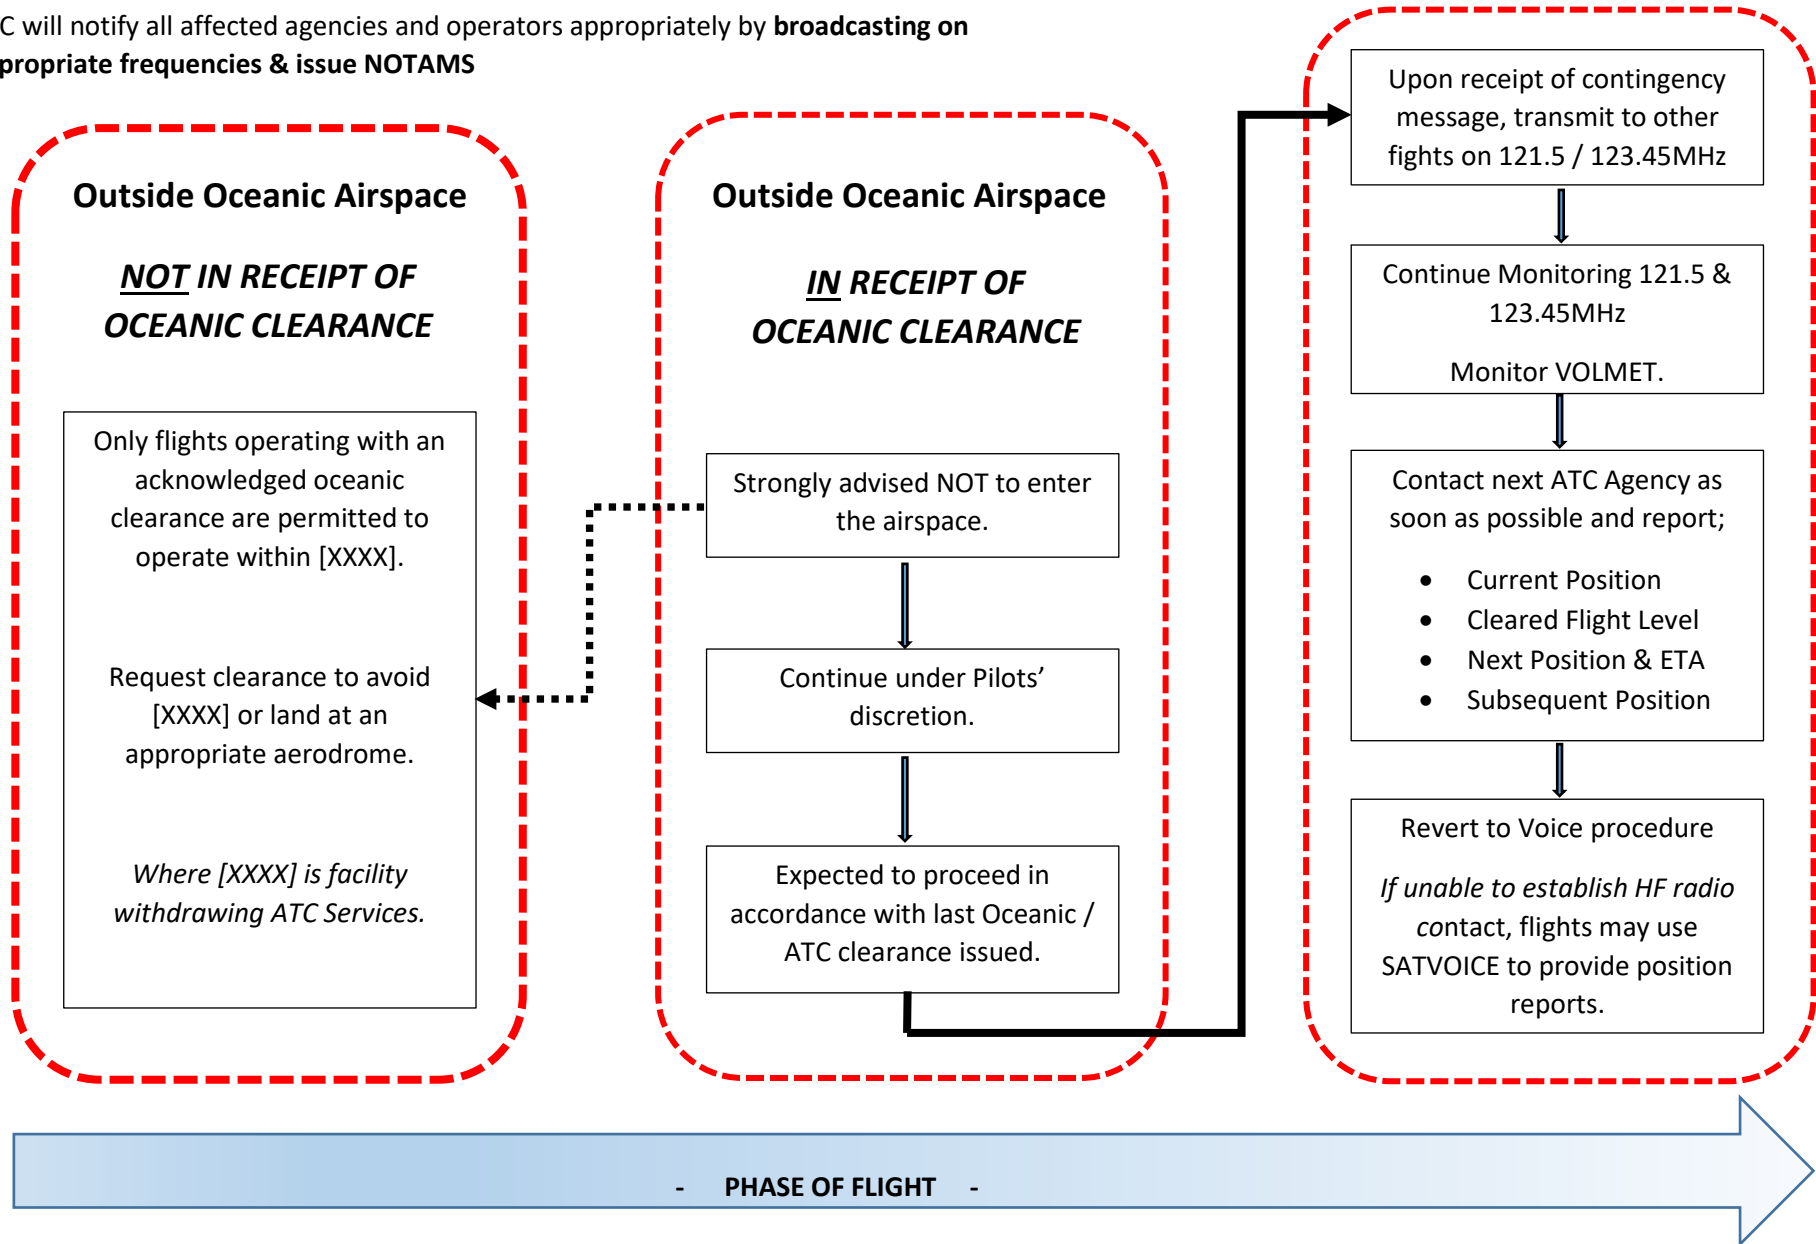

CONTINGENCY CONSIDERATIONS

GUIDANCE FOR PILOTS IN THE IMMEDIATE AFTERMATH OF A SUDDEN WITHDRAWAL OF ATC SERVICES IN OCEANIC AIRSPACE

ICAO IN-FLIGHT BROADCAST BY AIRCRAFT (TIBA)

Broadcast on the last assigned frequency, 121.5 and 123.45 the following:

ALL STATIONS (call-sign),
FLIGHT LEVEL (number) (or CLIMBING/DESCENDING TO FLIGHT LEVEL (number)) (direction) (ATS Route) (or DIRECT FROM position) TO (position))
AT (time)
ESTIMATING (next reporting point, or the point of crossing or joining a designated ATS route)
AT (time) (call sign) FLIGHT LEVEL (number) (direction)

TIBA calls should be provided at the following times:

- a. 10 minutes before entering the designated airspace;
- b. 10 minutes prior to crossing a reporting point;
- c. 10 minutes prior to crossing or joining an ATS route;
- d. At 20 minute intervals between distant reporting points;
- e. 2 to 5 minutes, where possible before a change in a flight level;
- f. At the time of a change in flight level; and
- g. At any other time considered necessary by the flight-crew.

SATVOICE

SATVOICE Numbers for ATC Centers and Radio Stations can be found on the Jeppesen enroute charts

LEVEL CHANGE WITH AN ACKNOWLEDGED CLERANCE

NOTE: Flight-Crews shall use extreme caution and all available means to detect conflicting traffic

The following procedures shall be applied when conducting any level change to **comply with an acknowledged clearance** within airspace affected by the sudden withdrawal of ATC services.

At least 3 minutes prior to the commencement of a climb or descent the flight should broadcast on the last assigned frequency, 121.5 and 123.45 the following:

- ALL STATIONS (call-sign) (direction) DIRECT FROM (position) TO (position) LEAVING FLIGHT LEVEL (number) FOR FLIGHT LEVEL (number) AT (distance) (direction) FROM (position) AT (time).

When the level change begins, the flight should make the following broadcast:

- ALL STATIONS (call-sign) (direction) DIRECT FROM (position) TO (position) LEAVING FLIGHT LEVEL (number) NOW FOR FLIGHT LEVEL (number).

When level, the flight should make the following broadcast:

- ALL STATIONS (call-sign) MAINTAINING FLIGHT LEVEL (number)